


Topo Mapping Setup

- Click on the Config. Menu.



a. Implement Swath Setup

- Select Implement Setup
- If there is not currently a swath width that is desired a new one will need to be created.
- Select New, Enter a Name, Select Setting, Set Swath Width & Application Width

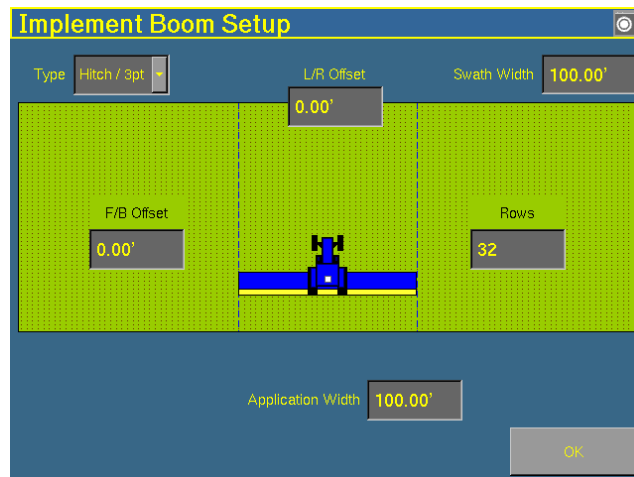

b. GPS Configuration

- Select GPS Receiver / Setup
 - Receiver Type
 - Trimble AgGPS 432/442 (Firmware Version 3.64)
 - Generic NMEA (Firmware Version 3.50, 3.32)
 - Port
 - P4 Controller

c. Field Level Survey Design

- Set Survey height Mode – GPS Mode
- Relative Heights – Enable
- Force Re-bench – No

Topo Mapping Steps

1. Hit the Run Screen




2. Enter Your Customer Information, Select OK


3. Under the Survey/Design Tab  - Create a Bench Mark



4. Start Recording Interior Data

5. Start Coverage Logging as well

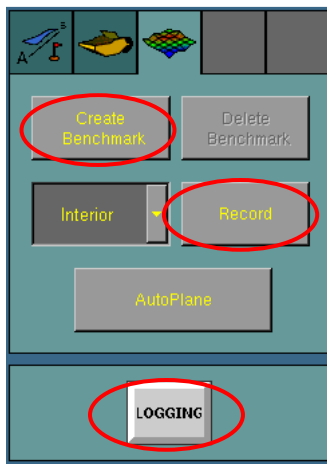

6. Away you go, when you are finished hit go to the Home Screen  and close the project.

